




 





















 

 





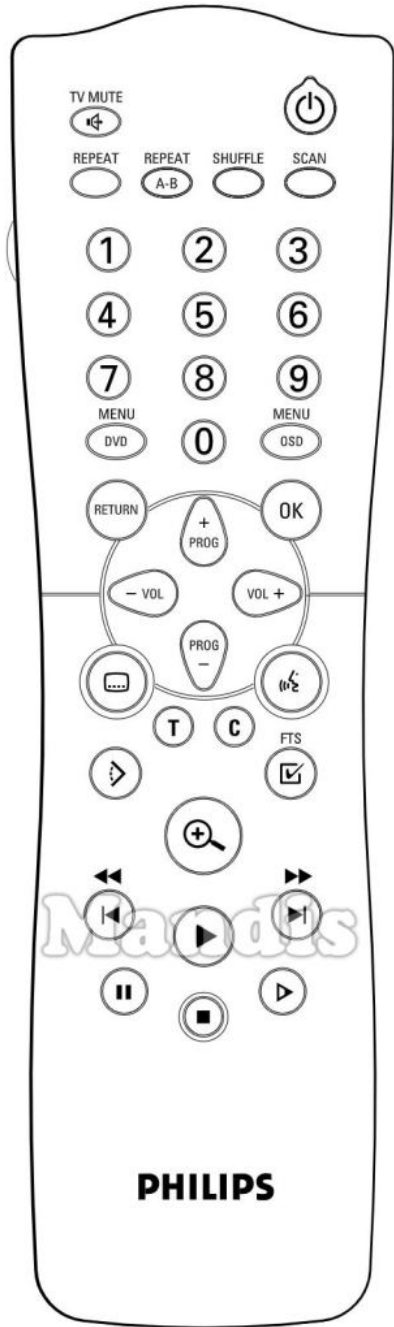


Original	Replacement
	 Power
	 Text
	 Options
	 AV
	 Smart
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 D. Menu
	 0
	 Menu


Original	Replacement
	 Back
	 Up
	 Ch +
	 Ok
	 Left
	 Vol -
	 Right
	 Vol +
	 Subt
	 Down
	 Ch -
	 Dual
	 TV/R
	 Format
	 Eject
	 <<
	 I<<









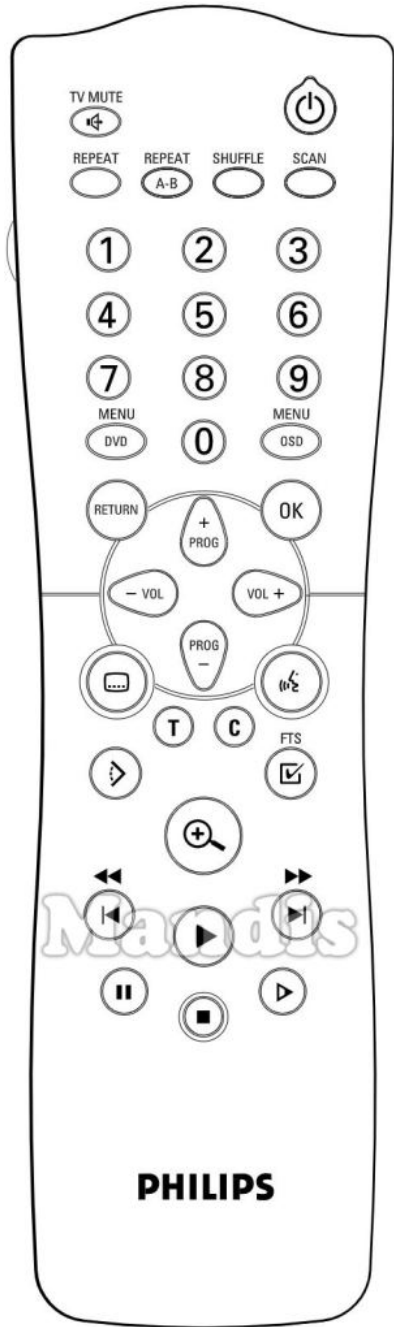

 


 











 








 







Original		Replacement		Original		Replacement	
	Play		Play				
	>>		>>				
	>		>>				
	Pause		Pause				
	Stop		Stop				





	Original	Replacement		Original	Replacement
	Power		Power		Down
	1		1		I<<
	2		2		I>>
	3		3		Stop
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Up		Up		
	OK		Ok		
	Vol -		Vol -		
	Left		Left		
	Vol +		Vol +		
	Right		Right		

