



Original	Replacement
	 Power
	 AV / Input / RDS
	 +  Shift + 8
	 TV/Radio /
	 Eject / Surround
	 +  Shift + Setup / OPT / Tools
	 OK
	 Exit / Cancel / Clear
	 Green / APP / Repeat
	 D.Menu / Top
	 Setup / OPT /
	 Up
	 Left
	 +  Shift + OK
	 Right
	 Down
	 Back / Return

Original	Replacement
	 Display / Media
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Rec / Rec Mode
	 Stop / Hold
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 0
	 3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	2		2				
	Audio		Audio / Lang I/II				
	Rec Mode		Shift + Rec / Rec Mode				
	Timer		Sleep / Timer				
	Edit		Zoom / Size				
	Showview		Smart / List				

