






 

 

 

 

 

 




 

 

 


















 

 

 




 
 

 





 









 

 









 


 






 

 







 


Original	Replacement	Original	Replacement
 Standby / On	 Power	 ShowView	 Smart
 VCR Eject	 Shift + Exit	 Cancel	 Exit
 DVD Open / Close	 Eject	 Title Menu / Top Menu	 Menu
 DVD / VCR	 Media	 Up / CH +	 Up
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Down
 3	 3	 Down / CH -	 Ch -
 4	 4	 Right / TRK +	 Right
 5	 5	 Left / TRK -	 Left
 6	 6	 Enter	 Ok
 7	 7	 DVD Menu	 D. Menu
 8	 8	 Setup	 Options
 9	 9	 Stop	 Stop
 0	 0	 Play	 Play
 Return	 Back	 Pause / Still	 Pause
 Timer Rec	 Shift + AV	 I<< Skip / Index -	 I<<
 Input Select	 AV	 << Rew / Search	 <<





Original	Replacement
 >> F.Fwd /	 >>
 >>I Skip / Index	 >>I
 One Touch	 TEXT
 CM Skip	 FORMAT
 Slow I>	 SHIFT + >>
 Rec	 REC MODE
 Rec Mode / Speed	 SHIFT + REC MODE
 Dubbing	 3D
 Audio / Audio select	 DUAL
 Display	 INFO
 Zoom	 SHIFT + ZOOM
 Repeat A-B	 SHIFT + REPEAT TEXT
 Zero Return	 SHIFT + RETURN BACK
 Counter Reset / Angle	 SLEEP
 Subtitle / ATR	 AD SUBT
 Play Mode /	 SHIFT + PLAY MODE
 Clock Counter	 MUTE

Original	Replacement
 TV / VCR	 SEARCH TV/R

