


 


 
 
 
 
 

 














 

 
 







 
 



 

 



 










 

 
 
















 
 
 


 

 
 




Original	Replacement	Original	Replacement
 Power On/Off	 Power	 I-II MTS	 Dual
 Display	 Info	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 Integrator	 Smart
 3	 3	 Home	 Menu
 4	 4	 Exit	 Exit
 5	 5	 Return	 Back
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter/Set	 Ok
 CH Enter	 Guide	 Red	 Red
 P/CH+	 Pre Ch	 Green	 Green
 P/CH-	 Ch +	 Yellow	 Yellow
 Muting	 Mute	 Blue	 Blue
		 PC	 Media

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 FF	 FF	 Stop	 Stop
 PAUSE	 PAUSE	 Play	 Play
 RR	 RR	 Eject	 Eject
 DISC NAV	 DISC NAV	 SOUND	 AD
 LIST	 LIST	 SUBT	 OPT
 PROG	 PROG	 PICTURE	 ECO
 SLEEP	 SLEEP	 FORMAT	 3D
 E-MANUAL	 E-MANUAL	 REPEAT	 TIMER
 D.MENU	 D.MENU	 TEXT	 AV
 TOP MENU	 TOP MENU	 MENU	 MENU
 MENU	 MENU	 EXIT	 EXIT
 UP	 UP	 RETURN	 RETURN
 DOWN	 DOWN	 BACK	 BACK
 LEFT	 LEFT	 OK	 OK
 RIGHT	 RIGHT	 EXIT	 EXIT
 HOME	 HOME	 RETURN	 RETURN
 SMART	 SMART	 APP	 CH
 MEDIA	 MEDIA	 VOL+	 VOL+
 VOL+	 VOL+	 VOL-	 VOL-
 VOL-	 VOL-	 1	 1
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5
 5	 5	 6	 6
 6	 6	 7	 7
 7	 7	 8	 8
 8	 8	 9	 9
 9	 9	 0	 0
 0	 0	 GUIDE	 GUIDE
 GUIDE	 GUIDE	 FAV	 PRE-CH
 PRE-CH	 PRE-CH	 A	 A
 A	 A	 B	 B
 B	 B	 C	 C
 C	 C	 D	 D
 D	 D	 Mandis SHOP	 Mandis SHOP
 Mandis SHOP	 Mandis SHOP	 www.mandis.tv	 www.mandis.tv





Original	Replacement
Input	AV
Ext Input	+  Shift + AV
TV	TV/R
Split	+  Shift + 3D
Sub Input	Subt
Swap	Sleep
(PIP) Shift	3D
Drive Off	+  Shift + Options
Factory	D. Menu
2nd Factory	Text
Set Up/Auto	Options
ID No. SET -	+  Shift + TV/R
Clear +	+  Shift + Exit
Power Control	+  Shift + Power
AV Selection	List
Power Off	+  Shift + Media
Power On	+  Shift + Smart

Original	Replacement
Zoom/Point	Eject
Zoom-	+  Shift + Ch -
Zoom+	+  Shift + Ch +
Freeze	Pause
Size/Screen	Format
Input 1	+  Shift + 1
Input 2	+  Shift + 2
Input 3	+  Shift + 3
Input 4	+  Shift + 4
Input 5	+  Shift + 5
Input 6	+  Shift + 6
Input 7	+  Shift + 7
Input 8	+  Shift + 8







Original	Replacement
Power On/Off	Power
Display	Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH Enter	Pre Ch
.	Guide
P/CH+	Ch +
P/CH-	Ch -
Muting	Mute

Original	Replacement
I-II MTS	Dual
Vol+	Vol +
Vol-	Vol -
Integrator	Smart
Home	Menu
Exit	Exit
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter/Set	Ok
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
PC	Media





Original	Replacement
Input	AV
Ext Input	Shift + AV
TV	TV/R
Split	Shift + 3D
Sub Input	Subt
Swap	Sleep
(PIP) Shift	3D
Drive Off	Shift + Options
Factory	D. Menu
2nd Factory	Text
Set Up/Auto	Options
ID No.Set -	Shift + TV/R
Clear +	Shift + Exit
Control Power	Shift + Power
AV Selection	List
Power Off	Shift + Media
Power On	Shift + Smart

Original	Replacement
Zoom-	Shift + Ch -
Zoom/Point	Eject
Zoom+	Shift + Ch +
Freeze	Pause
Size/Screen	Format
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
Input 6	Shift + 6
Input 7	Shift + 7
Input 8	Shift + 8

