



Original	Replacement
Standby/on	Power
DVD/CD	Shift + 2
DVD/CD	Shift + 3
DVD/CD	Red / Netflix / Search
Tuner/FM/AM	Shift + 6
Tuner/FM/AM	Green / APP / Repeat
TV	Shift + 1
TV	Yellow / YouTube / Repeat
Line/L1/L2	Shift + 7
Line/L1/L2	Blue / Prime Video / Random
Front Surround	Shift + Up
Pause	Pause / Step / Freeze
Open/Close	Eject / Surround
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-

Original	Replacement
Stop	Stop / Hold
>>I	>>I / Preset+
DVD Menu	D.Menu / Top
Up/Tune+	Up
Up/Tune+	Shift + >> /
Return	Back / Return
Left/ST-	Left
Enter	OK
Right/ST+	Right
Mute	Mute / Dimmer
Down/Tune-	Shift + << /
Down/Tune-	Down
Sound	Sound / Title
Volume Master-	Vol-
Volume	Vol+
CH+ Tv	Shift + CH+ /
Power Tv	Shift + Power





Original		Replacement		Original		Replacement	
	Vol+ Tv		Shift + Vol+		Zoom		Zoom / Size
	CH- Tv		Shift + CH- /		2		2
	Input Tv		Shift + AV / Input / RDS		Top Menu		Shift + D.Menu / Top Menu
	Vol- Tv		Shift + Vol-		3		3
	Surround		Shift + Eject / Surround		Home Menu		Menu / Home
	Bass Mode		Shift + Right		4		4
	Advanced		Smart / List		System Setup		Setup / OPT /
	Dialogue		Shift + Audio / Lang I/II		5		5
	Virtual SB		Shift + Left		Test Tone		Text / Goto
	CH Level		Shift + Down		6		6
	Audio		Audio / Lang I/II		Quiet/Midnight		Sleep / Timer
	Program		TV/Radio /		7		7
	Subtitle		Subtitle / EQ		Dimmer		Shift + Mute / Dimmer
	Repeat		Shift + Green / APP /		8		8
	Angle		Info / Angle		Display		Display / Media
	Random		Shift + Blue / Prime		9		9
	1		1		Timer Clock		Shift + Sleep / Timer





Original		Replacement		Original		Replacement	
	CLR		Exit / Cancel / Clear				
	SR+		Picture / Format				
	0		0				
	Folder-		CH- / Page-				
	Enter		Guide / EPG / -/--				
	Folder+		CH+ / Page+				
	Room Setup	+	Shift + Setup / OPT / Tools				

