



Original		Replacement		Original		Replacement	
	Power Receiver		Power		Loudness		Subtitle / EQ
	Input Sel		AV / Input / RDS		Test Tone		Text / Goto
	Standard		Sound / Title		Left/ST-		Left
	Stereo		Audio / Lang I/II		Right/ST+		Right
	ADV Surr.		Eject / Surround		CH Select		Smart / List
	Master		Vol+		Midnight		Sleep / Timer
	Master Volume-		Vol-		ATT		D.Menu / Top
	Enter		OK		Signal Select		Menu / Home
	Remote Setup		Setup / OPT /		CH Level+		CH+ / Page+
	Effect-		I<< / Preset-		CH Level-		CH- / Page-
	Effect+		>>I / Preset+		TV		1
	Mute		Mute / Dimmer		CD-R		3
	DVD		2		Power TV		Shift + Power
	VCR		4		1 Tv		Shift + 1
	TUN		6		2 Tv		Shift + 2
	Up/Tune+		Up		3 Tv		Shift + 3
	Down/Tune-		Down		4 Tv		Shift + 4





Original	Replacement	Original	Replacement
5 Tv	Shift + 5	Left Tv	Shift + Left
6 Tv	Shift + 6	Pause/T.Edit Tv	Shift + Pause / Step /
7 Tv	Shift + 7	Play/D.Access Tv	Shift + Play /
9 Tv	Shift + 9	Stop/MPX Tv	Shift + Stop /
8 Tv	Shift + 8	>>/RF ATT Tv	Shift + >>I / Preset+
0 Tv	Shift + 0	I<</Display Tv	Shift + I<< / Preset-
+10 Tv	Shift + Guide / EPG / -/-	>>/Class Tv	Shift + >> /
Menu Tv	Shift + Menu /	<</Band Tv	Shift + << /
Tv Input	Shift + AV / Input / RDS	Rec Tv	Shift + Rec / Rec Mode
Tv Vol+	Shift + Vol+	Disc Tv	Shift + Fav / Marker / PC
Tv Vol-	Shift + Vol-		
Channel + Tv	Shift + CH+ /		
Channel - Tv	Shift + CH- /		
Up Tv	Shift + Up		
Down Tv	Shift + Down		
Enter Tv	Shift + OK		
Right Tv	Shift + Right		





Original	Replacement
Power DVD	Power
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Top Menu	D.Menu / Top
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
7 DVD	7
8 DVD	8
9 DVD	9
0 DVD	0
+10 DVD	Guide / EPG / -/--
Disc DVD	Fav / Marker / PC

Original	Replacement
Menu DVD	Menu / Home
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
Channel+ DVD	CH+ / Page+
Channel- DVD	CH- / Page-
Up DVD	Up
Down DVD	Down
Right DVD	Right
Left DVD	Left
Enter DVD	OK
Pause DVD	Pause / Step / Freeze
Rec DVD	Rec / Rec Mode
Play DVD	Play / Slow
<< DVD	<< / Tune-
>> DVD	>> / Tune+
Stop DVD	Stop / Hold





Original		Replacement		Original		Replacement	
	>>I DVD		>>I / Preset+		Down VCR	+	Shift + Down
	I<< DVD		I<< / Preset-		Right VCR	+	Shift + Right
	Power VCR	+	Shift + Power		Left VCR	+	Shift + Left
	1 VCR	+ +	Shift + 1		Enter VCR	+	Shift + OK
	2 VCR	+ +	Shift + 2		Pause VCR	+	Shift + Pause / Step /
	3 VCR	+ +	Shift + 3		Play VCR	+	Shift + Play /
	4 VCR	+ +	Shift + 4		Stop VCR	+	Shift + Stop /
	5 VCR	+ +	Shift + 5		<< VCR	+	Shift + << /
	6 VCR	+ +	Shift + 6		>>I VCR	+	Shift + >>I / Preset+
	7 VCR	+ +	Shift + 7		>> VCR	+	Shift + >> /
	8 VCR	+ +	Shift + 8		I<< VCR	+	Shift + I<< / Preset-
	9 VCR	+ +	Shift + 9		Rec VCR	+	Shift + Rec / Rec Mode
	0 VCR	+ +	Shift + 0				
	Disc VCR	+	Shift + Fav / Marker / PC				
	Channel+ VCR	+	Shift + CH+ /				
	Channel- VCR	+	Shift + CH- /				
	Up VCR	+	Shift + Up				





Original		Replacement		Original		Replacement	
	Power CD		Power		Channel- CD		CH- / Page-
	1 CD		1		Up CD		Up
	2 CD		2		Down CD		Down
	3 CD		3		Right CD		Right
	4 CD		4		Left CD		Left
	5 CD		5		Enter CD		OK
	6 CD		6		Pause CD		Pause / Step / Freeze
	7 CD		7		Play CD		Play / Slow
	8 CD		8		<< CD		<< / Tune-
	9 CD		9		>> CD		>> / Tune+
	0 CD		0		Stop CD		Stop / Hold
	+10 CD		Guide / EPG / -/--		I<< CD		I<< / Preset-
	Disc CD		Fav / Marker / PC		>>I CD		>>I / Preset+
	Master		Vol+		Power TVC		Shift + Power
	Master Volume-		Vol-		1 TVC		Shift + 1
	Mute		Mute / Dimmer		2 TVC		Shift + 2
	Channel+ CD		CH+ / Page+		3 TVC		Shift + 3





Original	Replacement
Power TUN	Power
1 TUN	1
2 TUN	2
3 TUN	3
4 TUN	4
5 TUN	5
6 TUN	6
7 TUN	7
8 TUN	8
9 TUN	9
0 TUN	0
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
TUNE+ TUN	>> / Tune+
TUNE- TUN	<< / Tune-
ST+ TUN	>>I / Preset+

Original	Replacement
ST- TUN	I<< / Preset-
D.Access TUN	Play / Slow
Band TUN	Pause / Step / Freeze
Class TUN	Stop / Hold
MPX TUN	Rec / Rec Mode
Display TUN	Display / Media
RF ATT TUN	Smart / List
Power CDR	Shift + Power
1 CDR	Shift + 1
2 CDR	Shift + 2
3 CDR	Shift + 3
4 CDR	Shift + 4
5 CDR	Shift + 5
6 CDR	Shift + 6
7 CDR	Shift + 7
8 CDR	Shift + 8
9 CDR	Shift + 9



