 

 







 













 






 











 



 






 







 













Original		Replacement		Original		Replacement	
	Standby		Power		Display		Display / Media
	Mute		Mute / Dimmer		Tv/Radio		TV/Radio /
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Menu		Menu / Home
	6		6		Down		Down
	7		7		Exit		Exit / Cancel / Clear
	8		8		FAV		Fav / Marker / PC
	9		9		Vol+		Vol+
	0		0		Vol-		Vol-
	Aspect		Shift + Picture / Format		Rec		Rec / Rec Mode
	Recall		Back / Return		CH+		CH+ / Page+
	TVG		Guide / EPG / -/-		CH-		CH- / Page-
	Subtitle		Subtitle / EQ		Media		Shift + Display / Media
	Audio		Audio / Lang I/II		Source		AV / Input / RDS





	Original	Replacement
	 P.Mode	 Picture / Format
	 S.Mode	 Sound / Title
	 Sleep	 Sleep / Timer
	 Text	 Text / Goto
	 Hold	 Shift + Stop /
	 Reveal	 D.Menu / Top
	 Subpage	 Setup / OPT /
	 Play	 Play / Slow
	 Pause/Timeshift	 Pause / Step / Freeze
	 Stop	 Stop / Hold
	 Index	 Info / Angle
	 Size	 Zoom / Size
	 <<	 << / Tune-
	 >>	 >> / Tune+
	 I<<	 I<< / Preset-
	 >>I	 >>I / Preset+
	 Red	 Red / Netflix / Search

	Original	Replacement
	 Green	 Green / APP / Repeat
	 Yellow	 Yellow / YouTube / Repeat
	 Blue	 Blue / Prime Video / Random

