
 
 




 

 
 





 



 
 


 

 


 


 










 


 
 



 

 

Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Media	Menu Off	 Exit
Reveal	 Smart	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Info	 Info	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



 
 






 








Original	Replacement	Original	Replacement
8	 8		
9	 9		
Guide -/-- 1.	 Guide		
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Bright+ Mode	 Options		
Mix Scan	 +  Shift + Smart		
Game Coo	 +  Shift + Options		
Aft/Caf	 +  Shift + Menu		
Blue	 Blue		
On/Tim	 List		
Off/Tim	 +  Shift + List		
Store	 +  Shift + Media		
AV 2	 +  Shift + AV		


 
 


 
 
 


 
 
 
 



 
 
 


 
Original	Replacement	Original	Replacement
Search	 +  Shift + TV/R		
Rotate Text	 +  Shift + 3D		
Disp	 3D		
Color+ P.Std	 +  Shift + Format		
Store Text	 +  Shift + Text		
Tune-	 +  Shift + Left		
Tune+	 +  Shift + Right		
Contrast+	 +  Shift + Ch +		
Color- S.Std	 +  Shift + Dual		
Contrast-	 +  Shift + Ch -		
3.*	 +  Shift + Guide		
4.# 16:9	 Format		
Surround	 +  Shift + Red		
Nicam/Mono	 +  Shift + Green		
Level L	 +  Shift + Yellow		
Level R/Woofer	 +  Shift + Blue		




 
 


 


 
 

 



 





 



Original	Replacement	
On/Off		Power
Mute		Mute
Update	 + 	Shift + Smart
Txt Stop		Stop
Reveal		Smart
Info		Info
Subt.List		Subt
Sleep Timer		Sleep
Return TV		TV/R
Menu video		D. Menu
Text		Text
Txt Expand		Eject
TV/AV		AV
Menu		Menu
Menu Up		Up
Display	 + 	Shift + Info
Menu Left		Left

Original	Replacement	
OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +
Chan.Up		Ch +
Menu audio		Dual
Volume-		Vol -
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Original	Replacement	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Audio+	 + 	Shift + List
Bright+ Mode	 + 	Shift + 3D
Green		Green
Rotate Text		Play
Mix Scan		List
Aft/Caf	 + 	Shift + Ok
Yellow		Yellow
Blue		Blue
Color+ P.Std	 + 	Shift + Format
Tone-	 + 	Shift + Down
Search	 + 	Shift + TV/R

Original	Replacement	
Tone+	 + 	Shift + Up
Disp		3D
Store Text	 + 	Shift + Text
Store		Media
On/Tim		Options
Off/Tim	 + 	Shift + Options
AV 2	 + 	Shift + AV
Color- S.Std	 + 	Shift + Dual
4.# 16:9		Format
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Browse	 + 	Shift + Back
Contrast+	 + 	Shift + Ch +
Contrast-	 + 	Shift + Ch -
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



