



Original	Replacement
 Power	 Power
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Nicam / A2	 Shift + Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide

Original	Replacement
 Recall / Mouse	 Back
 FAV	 Pre Ch
 Red	 Red
 Settings	 Options
 Home	 Smart
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Source	 AV
 Info	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Menu	 Menu
 Exit	 Exit





Original		Replacement		Original		Replacement	
	Vol +		Vol +		Auto		Shift + Media
	Vol -		Vol -		Repeat		Shift + Text
	Media		Media		A-B		Shift + Play
	TV / Radio		TV/R		Aspect		Format
	CH +		Ch +				
	CH -		Ch -				
	Play/Pause / Text		Play				
	Play/Pause / Text		Pause				
	Play/Pause / Text		Text				
	<< / Size		Eject				
	<< / Size		Eject				
	>> / Reveal		Eject				
	Stop / Hold		Stop				
	I<< / Index		I<<				
	>>I / Subpage		>>I				
	Cancel		Shift + Exit				
	Subtitle		Subt				

