



Original		Replacement		Original		Replacement	
	Standby		Power		Aspect	+	Shift + Picture / Format
	Auto		Smart / List		Nicam		Audio / Lang I/II
	Mute		Mute / Dimmer		Display		Display / Media
	1		1		CH+		CH+ / Page+
	2		2		CH-		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Down		Down
	8		8		LCD Menu		Menu / Home
	9		9		Exit		Exit / Cancel / Clear
	0		0		Input		AV / Input / RDS
	-/--	+	Shift + Guide / EPG / -/--		PMode		Picture / Format
	Recall		Back / Return		SMode		Sound / Title
	Vol+		Vol+		Sleep		Sleep / Timer
	Vol-		Vol-		Fav		Fav / Marker / PC





Original	Replacement
	I<< / Preset-
	Guide / EPG / /--
	Text / Goto
	>>I / Preset+
	Stop / Hold
	Shift + Audio / Lang I/II
	Subtitle / EQ
	Info / Angle
	Zoom / Size
	TV/Radio /
	Eject / Surround
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Replacement

