

 







 







 





































 



 






 





 



 

 





























Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 Smart S	 D.Menu / Top	 L / R	 Eject / Surround
 Smart P	 Sound / Title	 Index / Play	 Play / Slow
	 Shift + Picture / Format	 Index / Play	 Display / Media

Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	Source	AV / Input / RDS
8	8	CH -	CH- / Page-
9	9	Info	Info / Angle
0	0	Sleep	Sleep / Timer
F1	Exit / Cancel / Clear	Recall	Back / Return
Smart S	D.Menu / Top	L / R	Eject / Surround
Smart P	Sound / Title	Index / Play	Play / Slow
	Shift + Picture / Format	Index / Play	Display / Media





Original	Replacement
Zoom / Pause	Zoom / Size
Zoom / Pause	Pause / Step / Freeze
Reveal / Stop	Stop / Hold
Reveal / Stop	Setup / OPT /
TTX	Text / Goto
Hold / I<<	I<< / Preset-
Hold / I<<	+ Shift + Stop /
List / >>I	>>I / Preset+
List / >>I	Smart / List
Language / <<	<< / Tune-
Language / <<	Audio / Lang I/II
Save / >>	>> / Tune+
Save / >>	+ Shift + Rec / Rec Mode
Red / Radio / Rec	Rec / Rec Mode
Red / Radio	Red / Netflix / Search
Red / Radio / Rec	TV/Radio /
Green / Subtitle	Subtitle / EQ

Original	Replacement
Green / Subtitle	Green / APP / Repeat
Yellow / Fav	Fav / Marker / PC
Yellow / Fav	Yellow / YouTube / Repeat
Blue / EPG	Guide / EPG / -/--
Blue / EPG	Blue / Prime Video / Random

