
 



 





Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Mute		Mute		EPG		Guide
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		CH+		Ch +
	8		8		CH-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	FAV	 +  PRE-CH	Shift + Pre Ch		Red		Red
	Recall	 PRE-CH	Pre Ch		Green		Green
	Game	 MEDIA	Media		Yellow		Yellow
	Auto	 SMART	Smart		Blue		Blue
	Info	 INFO	Info		Zoom		Eject





Original		Replacement		Original		Replacement	
	Lan/Audio		Dual				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Text		Text				
	Tv/Radio		TV/R				
	Subtitle		Subt				

