



Original		Replacement		Original		Replacement	
	Power On		Power		Vol-		Vol -
	Power Off		Shift + Power		Mute		Mute
	1		1		FRQ Direct		Play
	2		2		Tune		I<<
	3		3		Preset		>>I
	4		4		FM Mono		Pause
	5		5		Band		Stop
	6		6		Center		Yellow
	7		7		Swooper		Red
	8		8		Surround		Green
	9		9		Menu		Menu
	0		0		Up		Up
	Ten/+10		Guide		Down		Down
	Memory		Pre Ch		+/Forward		Right
	CH+		Ch +		-/Back		Left
	CH-		Ch -		Enter		Ok
	Vol+		Vol +		CD		Shift + 1






 










 




















 
 

 




 

 

 

 




Original	Replacement	Original	Replacement
Tun	Shift + 2	7 CH	Subt
Tape	Shift + 3	Display	Info
EXT	Shift + 4	Tape 2	Exit
V1/DVD	Shift + 5	Phono	Back
V2	Shift + 6	Tone	Text
V3	Shift + 7	D-SLT	D. Menu
V4	Shift + 8	Scan	Shift + Play
V5	Shift + 9	PTY	<<
EQ	Smart	P-Tun	>>
DYN	Media	TP	Shift + Pause
Rec	Rec	TA	Shift + Stop
Zone	Shift + Smart	Aspect	Format
Sur+	Shift + Media	Disp	Shift + Info
2 CH	List	PIP	Sleep
PL C	Options	POP	TV/R
PL M	3D	Output	AV
5 CH	Dual	Power	Blue






 

 








	Original	Replacement		Original	Replacement
	Power On				Play
	Power Off				I<<
	1				>>I
	2				Pause
	3				Stop
	4				Menu
	5				Up
	6				OSD
	7				Down
	8				-/Back
	9				-/Back
	0				+ /Forward
	Ten (+10)				+ /Forward
	Clear (X)				Enter
	Vol+				Search-
	Vol-				Search+
	Mute				Random (DYN)
					TV/R







 














 

 





 










 



 



 


 




 
 


 
 

 

 
 
 

 


Original	Replacement	Original	Replacement
 PAL (Rec)	 Format	 Goto	 Shift + Left
 HD Mode	 3D	 Power	 Blue
 DIM (SUR+)	 AV		
 Prog (2CH)	 Sleep		
 Screen (PL C)	 Smart		
 Title (PL M)	 Media		
 Prog-Scan	 Options		
 Open (7CH)	 Eject		
 Display	 Info		
 Audio	 Dual		
 Angle	 List		
 Subtitle	 Subt		
 Zoom	 Shift + Eject		
 Resume	 Shift + Right		
 Repeat	 Text		
 A-B	 D. Menu		
 Slow	 Shift + Play		

Original	Replacement	Original	Replacement
 Goto	 Shift + Left	 Power	 Blue





Original		Replacement		Original		Replacement	
	Power On		Power		I<<		I<<
	Power Off		Shift + Power		>>I		>>I
	1		1		Pause		Pause
	2		2		Stop		Stop
	3		3		Open (ENT)		Ok
	4		4		Open (ENT)		Eject
	5		5		Search-		Ch -
	6		6		Search+		Ch +
	7		7		Disc 1		Shift + 1
	8		8		Disc 2		Shift + 2
	9		9		Disc 3		Shift + 3
	0		0		Disc 4		Shift + 4
	TEN (+10)		Guide		Disc 5		Shift + 5
	Vol+		Vol +		Program (2CH)		Sleep
	Vol-		Vol -		Random (PL C)		TV/R
	Mute		Mute		Repeat (PL M)		Text
	Play		Play		Disc+ (7CH)		>>





	Original	Replacement	Original	Replacement
DISPLAY DISP	Display (DISP)	INFO		
RESUME SCAN	Scan	HOME SMART		
REPEAT PTY	Time (PTY)	FAV PRE-CH		
A - B P-TUN	A-B (P-Tun)	E-MANUAL D.MENU		
GOTO TP	Review (TP)	APP MEDIA		
SLOW TA	Clear (TA)	CLEAR EXIT		
POWER	Power	D		

