









 





 

 











 







 



 











 





 





 



 

 











 











Original	Replacement	Original	Replacement
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Guide		Guide / EPG / -/--
	3D		Eject / Surround
	Ambilight		Display / Media
	Source		AV / Input / RDS
	TV		TV/Radio /
	[<>]/Format		Picture / Format
	Home		Menu / Home
	Smart Tv		Smart / List
	≡/List		Shift + Smart / List
	[i]/Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	III/Options		Setup / OPT /
	Back		Back / Return
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





	Original	Replacement		Original	Replacement
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Subtitle		Subtitle / EQ		
	0		0		
	[≡]/Text		Text / Goto		

