

 



 



 




 


 
 









 











 



 

 

 

 




 


 





 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 Sleep	 Sleep	 Left	 Left
 Nicam/A2	 Dual	 Enter	 Ok
 Still	 Pause	 1	 1
 16:9	 Format	 2	 2
 NR.	 Options	 3	 3
 Surround	 List	 4	 4
 Picture	 Shift + Format	 5	 5
 Tv/Av	 AV	 6	 6
 Display	 Info	 7	 7
 Sound	 Shift + Dual	 8	 8
 Up	 Up	 9	 9
 CH+	 Ch +	 0	 0
 CH-	 Ch -	 Guide	 Guide
 Down	 Down	 Recall	 Pre Ch
 Right	 Right	 Red	 Red





	Original	Replacement	Original	Replacement
	Green	 B		
	Yellow	 C		
	Cyan	 D		
	Index	 E-MANUAL D.MENU		
	Cancel	 CLEAR EXIT		
	Subpage	 AD SUBT		
	Size	 ZOOM		
	Hold			
	Reveal	 TOP MENU MENU		
	PIP Window	 SHIFT +  APP MEDIA		
	PIP Position	 SHIFT +  HOME SMART		
	PIP Swap	 HOME SMART		
	TXT/CC	 REPEAT TEXT		
	PIP Size	 APP MEDIA		
	PIP On/Off	 SHIFT + 		

