
















































Original	Replacement	Original	Replacement
On/Off	 Power	Text	 Text / Goto
Mute	 Mute / Dimmer	TV/AV	 AV / Input / RDS
Update	 Play / Slow	Menu	 Menu / Home
Reveal	 Pause / Step / Freeze	Menu Up	 Up
Txt Stop	 Stop / Hold	Info	 Info / Angle
Tone-	 << / Tune-	Menu Left	 Left
Tone+	 >> / Tune+	OK Enter	 OK
Contrast-	 I<< / Preset-	Menu Right	 Right
Contrast+	 >>I / Preset+	Menu Off	 Exit / Cancel / Clear
Color- S.Std	 Sound / Title	Menu Down	 Down
Menu audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Color+ P.Std	 Picture / Format	On/Tim	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-



Original	Replacement	Original	Replacement
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Nicam/Mono	 +  Shift + Audio / Lang I/II		

Original	Replacement	Original	Replacement
4.# 16:9	 +  Shift + Picture / Format		
Mix Scan	 +  Shift + Text /		
Level L	 +  Shift + Left		
Level R/Woofer	 +  Shift + Right		
Audio+	 +  Shift + Vol+		
Off/Tim	 +  Shift + Smart / List		
Audio-	 +  Shift + Vol-		
3.*	 +  Shift + 0		

