


























 

 



 





































Original	Replacement	Original	Replacement
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat









 














Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear














 

 
 
Original	Replacement	Replacement
Up		Up
CH / Guide		Guide / EPG / -/-
Down		Down
M		Menu / Home
Vol+		Vol+
A / CH		Info / Angle
Vol-		Vol-
Mute		Mute / Dimmer
Left / -		Left
Right / +		Right
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
Clock		Shift + Sleep / Timer







Original	Replacement	Original	Replacement
Power		Power	
Recall		Back / Return	
CC		Subtitle / EQ	
Text		Text / Goto	
Smart		Smart / List	
Sleep		Sleep / Timer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Reset		Exit / Cancel / Clear	

Original	Replacement	Original	Replacement
CH / Guide		Guide / EPG / -/--	
Up		Up	
Down		Down	
A / CH		Info / Angle	
M		Menu / Home	
Right / +		Right	
Left / -		Left	
Vol+		Vol+	
Vol-		Vol-	
Mute		Mute / Dimmer	
CH+		CH+ / Page+	
CH-		CH- / Page-	
A		Red / Netflix / Search	
B		Green / APP / Repeat	
C		Yellow / YouTube / Repeat	
D		Blue / Prime Video / Random	
E		Shift + Red / Netflix / Search	



