


 
 

 
 
 


 
 
 
 

 




 

 

 



 




 
 

 
 
 


 
 





 

 



 





 

 
 
 


 

 

 

 

 

 
 
 
 
 
 
 

 
 
 
 
 

 
 




Original	Replacement	Original	Replacement
	Power		Power
	HDD		Red
	DVD		Green
	USB/DV		Yellow
	Tuner		Blue
	Select		Smart
	Tv/DVD		TV/R
	DVD Rec		Shift + Rec
	Source		AV
	Timer		Shift + AV
	Setup		Menu
	Back		Back
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	<<		<<
	Play		Play
	Pause/Pause Live		Pause
	>>		>>
	I<		I<<
	>I		>>I
	Stop		Stop
	Rec		Rec
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	Tv Mute		Mute
	PR+		Ch +
	PR-		Ch -
	1		1
	2		2
	3		3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Shuffle		Guide				
	T/C		Pre Ch				
	Subtitle		Subt				
	Angle		Media				
	Zoom		Eject				
	Audio		Dual				

