







 

Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II

Original	Replacement
 Pic.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Vol+	 Vol+
 Tv/Radio	 TV/Radio /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Rec / Rec Mode
	 D.Menu / Top
	 Shift + Sleep / Timer
	 Shift + Rec / Rec Mode
	 Info / Angle
	 Setup / OPT /
	 Text / Goto
	 Subtitle / EQ
	 Shift + Stop /
	 Play / Slow
	 Zoom / Size
	 Pause / Step / Freeze
	 Stop / Hold
	 I<< / Preset-

Original	Replacement
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+

