






Original	Replacement	Original	Replacement
 Standby	 Power	 Aspect	 Shift + Picture / Format
 Auto	 Smart / List	 Nicam	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 Display	 Display / Media
 1	 1	 CH+	 CH+ / Page+
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 OK
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 LCD Menu	 Menu / Home
 9	 9	 Exit	 Exit / Cancel / Clear
 0	 0	 Input	 AV / Input / RDS
 -/--	 Shift + Guide / EPG / -/--	 PMode	 Picture / Format
 Recall	 Back / Return	 SMode	 Sound / Title
 Vol+	 Vol+	 Sleep	 Sleep / Timer
 Vol-	 Vol-	 Fav	 Fav / Marker / PC





	Original	Replacement	Original	Replacement
	Fav-	 I<< / Preset-		
	EPG	 Guide / EPG / -/--		
	Text	 Text / Goto		
	Fav+	 >>I / Preset+		
	Hold	 Stop / Hold		
	Lang	 Shift + Audio / Lang I/II		
	Subtitle	 Subtitle / EQ		
	Index	 Info / Angle		
	Size	 Zoom / Size		
	Reveal	 TV/Radio /		
	Subpage	 Eject / Surround		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

