
 

 


 





 

 
 




 
 
 
 



 


 





 


 














 

 
 


 



 






Original		Replacement		Original		Replacement	
	Marche / Veille		Power		TV / Radio		TV/R
	Arret Son		Mute		Menu		Menu
	1		1		Quitter		Exit
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		Rec		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Retour		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	S-Titres		Subt		D.D		Smart





Original	Replacement	Original	Replacement
 I<< Prev	 I<<		
 Play / Lecture	 Play		
 << REW	 <<		
 Enreg.	 +  Shift + Rec		
 >>I Next	 >>I		
 Pause	 Pause		
 >> FWD	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue / Timer	 Blue		
 Blue / Timer	 AV		

