





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red/Reset	 Red / Netflix / Search
 Green/Repeat	 Green / APP / Repeat
 Yellow/Menu	 Yellow / YouTube / Repeat
 Blue/Zoom	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide / EPG / -/--

Original	Replacement
 OSD	 Display / Media
 P/N	 Info / Angle
 Setup	 Setup / OPT /
 L/R	 Sound / Title
 EQ	 Subtitle / EQ
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Treb+	 Shift + CH+ /
 Treb-	 Shift + CH- /
 Sub+	 CH+ / Page+
 Sub-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 <<	 << / Tune-





Original	Replacement
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Return	 Back / Return
 BT	 Shift + 9
 iPod	 TV/Radio /
 AUX	 Shift + 7
 Optical	 Shift + Setup / OPT / Tools
 USB	 Shift + 8

Original	Replacement

