



Original		Replacement		Original		Replacement	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Play		Play		1		1
	Pause		Pause		2		2
	<<		<<		3		3
	>>		>>		4		4
	Record		Rec		5		5
	Stop		Stop		6		6
	Menu		Menu		7		7
	Exit		Exit		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		EPG		Guide





Original		Replacement		Original		Replacement	
	Back		Back				
	Media		Media				
	USB		Smart				
	Tv/Radio		TV/R				
	Audio		Dual				
	TTX		Text				
	Timer		AV				
	FAV		Pre Ch				
	Res		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

