 



 


 
 

 





Original		Replacement		Original		Replacement	
	Power		Power		>>		>> / Tune+
	Mute		Mute / Dimmer		Menu		Menu / Home
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Back		Back / Return
	Yellow		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		OK		OK
	Internet		Smart / List		Right		Right
	Source		AV / Input / RDS		i		Info / Angle
	Lang		Audio / Lang I/II		Down		Down
	Tv/Radio		TV/Radio /		Exit		Exit / Cancel / Clear
	Subtitle		Subtitle / EQ		Vol+		Vol+
	LIB		Picture / Format		P::P		Display / Media
	Rec		Rec / Rec Mode		PR+		CH+ / Page+
	Stop		Stop / Hold		Vol-		Vol-
	<<		<< / Tune-		FAV		Fav / Marker / PC
	Play		Play / Slow		PR-		CH- / Page-
	Pause		Pause / Step / Freeze		1		1





Original		Replacement		Original		Replacement	
2 _{abc}	2	DVD 2	2				
3 _{def}	3	CD - STB 3	3				
4 _{ghi}	4	VIDEO 4	4				
5 _{jkl}	5	TAPE 5	5				
6 _{mno}	6	TUNER 6	6				
7 _{pqrs}	7	AUX - HDD 7	7				
8 _{tuv}	8	USB 8	8				
9 _{wxyz}	9	BLUETOOTH 9	9				
TEXT	Text	GOTO TEXT	Text / Goto				
0 __	0	HDMI - SAT 0	0				
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--				

