





 



 

 



 
 
 

 
 


 

 





 
 


 
 

 
 


 


 
 
 
 
 



 




 


















Original		Replacement		Original		Replacement	
	Power		Power		Dn		Ch -
	AV/YPbPr/VGA/Tv		AV		<</Rew		<<
	1		1		>>/FF		>>
	2		2		Vol+		Vol +
	3		3		Vol-		Vol -
	4		4		Main Page		Menu
	5		5		Up		Ch +
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		OK		Ok
	0		0		Play		Play
	Subtitle		Subt		Pause		Pause
	Audio		Dual		Stop		Stop
	I<<		I<<		Mute		Mute
	>>I		>>I		Movie		Red
	Up		Up		Music		Blue





	Original	Replacement		Original	Replacement
	Photo	 B			
	File	 C			
	Rotate	ECO 3D			
	Display	DISPLAY INFO			
	Setup	SETTINGS OPT			
	Zoom	ZOOM			
	Repeat	REPEAT TEXT			
	Slideshow	SEARCH TV/R			
	S-Time	-/-- GUIDE			
	S-Mode	FAV PRE-CH			

