




 



 

 

 

 





 

 

 



 
 
 

 







 



 

 





 

 

 


 





 
 




Original	Replacement	Original	Replacement
 Power	 Power	 -/-- / +10	 Shift + Guide
 Mute	 Mute	 Recall / Program	 Back
 Source	 AV	 TV Menu	 Menu
 P Mode	 Format	 Exit	 Exit
 S Mode	 Shift + Dual	 Goto / Text	 Text
 Audio I / II	 Dual	 Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK / Enter	 Ok
 5	 5	 V -	 Vol -
 6	 6	 V +	 Vol +
 7	 7	 P -	 Ch -
 8	 8	 P +	 Ch +
 9	 9	 Red / DVD	 Red
 0 / 10	 0	 Green / A-B	 Green



