












Original	Replacement
	 Smart / List
	 Text / Goto
	 Display / Media
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Back / Return
	 Fav / Marker / PC

Original	Replacement
	 Subtitle / EQ
	 Info / Angle
	 Picture / Format
	 Vol+
	 Shift + CH+ /
	 CH+ / Page+
	 Vol-
	 Shift + CH- /
	 CH- / Page-
	 Audio / Lang I/II
	 Shift + Audio / Lang I/II
	 Sound / Title
	 Guide / EPG / -/-
	 Up
	 Left
	 OK
	 Right





Original	Replacement	Original	Replacement
Menu	Menu / Home		
Down	Down		
Exit	Exit / Cancel / Clear		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
Rec	Rec / Rec Mode		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Timer	Sleep / Timer		
Aspect	Zoom / Size		

