


















Original	Replacement	Original	Replacement
8	 8	8	
Chan.Down	 CH- / Page-		
1	 1	1	
2	 2	2	
3	 3	3	
4	 4	4	
5	 5	5	
6	 6	6	
7	 7	7	
Volume-	 Vol-		
9	 9	9	
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0	0	
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		

Original	Replacement	Original	Replacement
Blue	 Blue / Prime Video / Random		
Display	 Display / Media		
Mute	 Mute / Dimmer		
Txt Stop	 Stop / Hold		
Info	 Info / Angle		
Return TV	 TV/Radio /		
Text	 Text / Goto		
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		



Original	Replacement	Original	Replacement
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		

