

















































 
 




Original	Replacement	Original	Replacement
	Power		Smart Hub
	Source		VOD
	HDMI		VOL +
	1		VOL -
	2		CH +
	3		CH -
	4		Guide
	5		Menu
	6		Tools
	7		Info
	8		Up
	9		Enter
	0		Down
	TTX/MIX		Right
	PRE-CH		Left
	Mute		Return
	CH List		Exit
			Red
			VOD
			VOL +
			VOL -
			CH +
			CH -
			-/-- / EPG
			MENU
			OPT+
			INFO
			UP
			OK
			DOWN
			RIGHT
			LEFT
			BACK
			EXIT
			Red (A)



