



 








 




 





















 









 
 




Original	Replacement	Original	Replacement
	Power		Smart Hub
	Source		VOD
	HDMI		VOL +
	1		VOL -
	2		P+
	3		P-
	4		Guide
	5		Menu
	6		Tools
	7		Info
	8		Up
	9		Enter
	0		Down
	TTX/MIX		Right
	PRE-CH		Left
	Mute		Return
	CH List		Exit
			Red
			VOD
			VOL +
			VOL -
			CH +
			CH -
			-/- / EPG
			MENU
			OPT+
			INFO
			UP
			OK
			DOWN
			RIGHT
			LEFT
			BACK
			EXIT
			Red (A)





Original		Replacement	
	Green		Green (B)
	Yellow		Yellow (C)
	Blue		Blue (D)
	Search		Audio
	P.Size		V-FOR
	Status		WIDE
	AD/Subt.		Subt.
	E-Manual	 + 	Shift + -/- / EPG
	History	 + 	Shift + P/C / FAV
	<</l<<		Rewind
	Pause		Pause
	>>/l/>>		Fast Forward
	Rec		Rec
	Play		Play
	Stop		Stop

