













 



 

 

 

















 







 










| Original  | Replacement   |
|---|---|
|  Power     |  Power               |
|  Source    |  AV / Input / RDS    |
|  1         |  1                   |
|  2         |  2                   |
|  3         |  3                   |
|  4         |  4                   |
|  5         |  5                   |
|  6         |  6                   |
|  7         |  7                   |
|  8         |  8                   |
|  9        |  9                  |
|  0       |  0                 |
|  PRE-CH  |  Fav / Marker / PC |
|  TTX/MIX |  Text / Goto       |
|  Vol+    |  Vol+              |
|  Vol-    |  Vol-              |
|  Mute    |  Mute / Dimmer     |

| Original  | Replacement  |
|---|--|
|  PR+       |  CH+ / Page+              |
|  PR-       |  CH- / Page-              |
|  CH.List   |  Shift + Smart / List     |
|  Menu      |  Menu / Home              |
|  Smart Hub |  Smart / List             |
|  Guide     |  Guide / EPG / -/-        |
|  Tools     |  Setup / OPT /            |
|  Info      |  Info / Angle             |
|  Up        |  Up                       |
|  Down      |  Down                     |
|  Right    |  Right                   |
|  Return  |  Back / Return          |
|  Left    |  Left                   |
|  Enter   |  OK                     |
|  Exit    |  Exit / Cancel / Clear  |
|  Red/A   |  Red / Netflix / Search |
|  Green/B |  Green / APP / Repeat   |





| Original   | Replacement | Original   | Replacement                 |
|--|-------------|--|-----------------------------|
|   | Yellow/C    |   | Yellow / YouTube / Repeat   |
|   | Blue/D      |   | Blue / Prime Video / Random |
|   | E-Manual    |   | D.Menu / Top                |
|   | Stop        |   | Stop / Hold                 |
|   | Rec         |   | Rec / Rec Mode              |
|   | <</ <<      |   | << / Tune-                  |
|   | AD/Subt.    |   | Subtitle / EQ               |
|   | AD/Subt.    |   | Audio / Lang I/II           |
|   | Play        |   | Play / Slow                 |
|   | Pause       |   | Pause / Step / Freeze       |
|  | >>/>>       |  | >> / Tune+                  |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |
|  |             |  |                             |

