 

 

 
 

 

 
 
 





 

 

 
 



 
 


 

















 
 












 









Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	Subt.		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE-CH		Pre Ch
	TTX/MIX		Text
	HDMI		Smart
	DTV		TV/R
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.List		List
	Menu		Menu
	Media.P		Media
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok





Original		Replacement		Original		Replacement	
	Return		Back		Pause		Pause
	Exit		Exit		>>		>>
	Red/A		Red				
	Green/B		Green				
	Yellow/C		Yellow				
	Blue/D		Blue				
	PIP		3D				
	PIP Down		I<<				
	PIP Up		>>I				
	P.Mode	 + 	Shift + Format				
	SRS		Dual				
	P.Size		Format				
	Still		D. Menu				
	Rec		Rec				
	Stop		Stop				
	<<		<<				
	Play		Play				

