



 
 

 

 


 
 
 
 
 

 
 
 

 
 
 
 
 

 





 
 




 
 
 



 

 






 
 



 

 
 
 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	Sports		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	PR+		Ch +
	PR-		Ch -
	CH.LIST		List
	Menu		Menu
	Smart HUB		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Exit		Exit
	Red/A		Red





Original		Replacement		Original	Replacement
	Green/B		Green		
	Yellow/C		Yellow		
	Blue/D		Blue		
	E-Manual		Shift + D. Menu		
	Extra		D. Menu		
	Search		TV/R		
	PIC.Size		Format		
	Picture		Shift + Format		
	AD/Subt		Subt		
	<</ <<		<<		
	Pause		Pause		
	>>/>>		>>		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

