

 

 

 

 

 



 

 

 

 


 
 
 

 


 
 


 




Original	Replacement
 Power	 Power
 TV	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Shift + Fav / Marker / PC
 Vol+	 Vol+
 FAV.CH	 Fav / Marker / PC
 Vol-	 Vol-
 Mute	 Mute / Dimmer

Original	Replacement
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Source	 AV / Input / RDS
 Info	 Info / Angle
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Return	 Back / Return
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 CH List	 Smart / List
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	Blue / Prime Video / Random		Blue / Prime Video / Random
	Text / Goto		Text / Goto
	Audio / Lang I/II		Audio / Lang I/II
	Subtitle / EQ		Subtitle / EQ

Original	Replacement

