
 





 
 






 



 

 






Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 CH List	 Shift + Smart / List
 CH List	 Display / Media
 P-	 CH- / Page-
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	 Green/B	 Green / APP / Repeat		
	 Yellow/C	 Yellow / YouTube / Repeat		
	 Blue/D	 Blue / Prime Video / Random		
	 E-Manual	 D.Menu / Top		
	 Sports	 TV/Radio /		
	 AD/SUBT	 Subtitle / EQ		
	 AD/SUBT	 Audio / Lang I/II		
	 Stop	 Stop / Hold		
	 <<	 << / Tune-		
	 I<<	 I<< / Preset-		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 >>	 >> / Tune+		
	 >>I	 >>I / Preset+		

