







 

















 



 



 

















 


 


 
 
 


 
 


 






 

 

 



 





 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Mute	 Mute / Dimmer
 Tv/DTV	 TV/Radio /	 Vol-	 Vol-
 Source	 AV / Input / RDS	 PR-	 CH- / Page-
 1	 1	 Guide	 Guide / EPG / -/--
 2	 2	 Menu	 Menu / Home
 3	 3	 CH.List	 Smart / List
 4	 4	 Tools	 Setup / OPT /
 5	 5	 Up	 Up
 6	 6	 Return	 Shift + Back / Return
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 -/--	 Shift + Guide / EPG / -/--	 Info	 Info / Angle
 0	 0	 Down	 Down
 Pre-CH	 Back / Return	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 PR+	 CH+ / Page+	 Green	 Green / APP / Repeat





Original		Replacement		Original		Replacement	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	TTX/MIX		Text / Goto				
	P.Size		Zoom / Size				
	DMA		Display / Media				
	E.Mode		D.Menu / Top				
	3D		Shift + 3				
	Subt.		Subtitle / EQ				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

