

 

 

 
 
 

 

 
 
 
 

 





 

 

 

 







| Original   | Replacement   |
|--|---|
|  Standby/On |  Power             |
|  Open/Close |  Eject / Surround  |
|  Source     |  AV / Input / RDS  |
|  USB        |  Shift + 8         |
|  DTV/Analog |  Smart / List      |
|  HDD        |  Shift + 7         |
|  1          |  1                 |
|  2          |  2                 |
|  3          |  3                 |
|  4         |  4                |
|  5        |  5               |
|  6        |  6               |
|  7        |  7               |
|  8        |  8               |
|  9        |  9               |
|  Tv/DVD   |  Display / Media |
|  0        |  0               |

| Original  | Replacement   |
|---|---|
|  Copy      |  Setup / OPT /         |
|  I<<       |  I<< / Preset-         |
|  Repeat    |  Shift + Green / APP / |
|  Pause     |  Pause / Step / Freeze |
|  >>I       |  >>I / Preset+         |
|  <<        |  << / Tune-            |
|  Stop      |  Stop / Hold           |
|  Play      |  Play / Slow           |
|  >>        |  >> / Tune+            |
|  Tv Vol+  |  Vol+                 |
|  Mute    |  Mute / Dimmer       |
|  Prog+   |  CH+ / Page+         |
|  Tv Vol- |  Vol-                |
|  Audio   |  Audio / Lang I/II   |
|  Prog-   |  CH- / Page-         |
|  Menu    |  Menu / Home         |
|  Up      |  Up                  |





| Original             | Replacement                 | Original             | Replacement               |
|----------------------|-----------------------------|----------------------|---------------------------|
| Return               | Back / Return               | FAV List             | Shift + Fav / Marker / PC |
| Left                 | Left                        | Timer                | Sleep / Timer             |
| OK                   | OK                          | Rec                  | Rec / Rec Mode            |
| Right                | Right                       | Guide                | Guide / EPG / -/-         |
| Info                 | Info / Angle                | Rec Mode             | Shift + Rec / Rec Mode    |
| Down                 | Down                        | Rec Pause/Time Shift | Shift + Pause / Step /    |
| Exit                 | Exit / Cancel / Clear       |                      |                           |
| Red                  | Red / Netflix / Search      |                      |                           |
| Green                | Green / APP / Repeat        |                      |                           |
| Yellow               | Yellow / YouTube / Repeat   |                      |                           |
| Blue                 | Blue / Prime Video / Random |                      |                           |
| Title List/Disc Menu | D.Menu / Top                |                      |                           |
| Subtitle             | Subtitle / EQ               |                      |                           |
| Marker               | Fav / Marker / PC           |                      |                           |
| Play List/Title Menu | Shift + Menu /              |                      |                           |
| Text                 | Text / Goto                 |                      |                           |
| Tv/Radio             | TV/Radio /                  |                      |                           |





| Original   | Replacement      | Original | Replacement |
|------------|------------------|----------|-------------|
| Standby/On | Power            | 0        | 0           |
| Mute       | Mute / Dimmer    |          |             |
| Tv/DVD     | TV/Radio /       |          |             |
| Source     | AV / Input / RDS |          |             |
| Tv Vol+    | Vol+             |          |             |
| Prog+      | CH+ / Page+      |          |             |
| Tv Vol-    | Vol-             |          |             |
| Prog-      | CH- / Page-      |          |             |
| 1          | 1                |          |             |
| 2          | 2                |          |             |
| 3          | 3                |          |             |
| 4          | 4                |          |             |
| 5          | 5                |          |             |
| 6          | 6                |          |             |
| 7          | 7                |          |             |
| 8          | 8                |          |             |
| 9          | 9                |          |             |

