

 
 



 
 



 








 
 











 

 




	Original	Replacement		Original	Replacement
	Start/Stop		Power		Play
	Photo		Options		Pause
	Display		Info		Stop
	Self Timer		AV		
	Zero Memory		Exit		
	Date/Time		Sleep		
	W		Ch +		
	T		Ch -		
	Photo Search		TV/R		
	A.DUB		Subt		
	I>/Slow		List		
	X2		Dual		
	>>		>>		
	<<		<<		
	< /-		I<<		
	F.ADV		Format		
	>/+		>>I		

