

 

 


 








 



 

 


 


 


 

 
 

 

 


 



 

 
 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Popup/Title Menu	 Shift + D.Menu / Top Menu
 Source Tv	 TV/Radio /	 <<	 << / Preset-
 Power Tv	 Shift + Power	 >>	 >> / Preset+
 Open/Close	 Eject / Surround	 <<	 << / Tune-
 Vol- Tv	 Vol-	 >>	 >> / Tune+
 Vol+ Tv	 Vol+	 Stop	 Stop / Hold
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Audio	 Audio / Lang I/II
 4	 4	 Home	 Menu / Home
 5	 5	 Subtitle	 Subtitle / EQ
 6	 6	 Tools	 Setup / OPT /
 7	 7	 Up	 Up
 8	 8	 Info	 Info / Angle
 9	 9	 Left	 Left
 Disc Menu	 D.Menu / Top	 Enter	 OK
 0	 0	 Right	 Right





Original	Replacement
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red/A	Red / Netflix / Search
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
View/Bonus	Picture / Format
A-B/Repeat	Shift + Yellow / YouTube /
Repeat	Shift + Green / APP /
Screen/Full	Zoom / Size

Original	Replacement

