
 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	Pre-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	CH List		Smart / List
	P-		CH- / Page-
	Media.P		Display / Media
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	E-Manual / D.Menu / Top		
	3D / Shift + 3		
	AD/Subt. / Subtitle / EQ		
	AD/Subt. / Audio / Lang I/II		
	Stop / Hold		
	<< / Tune-		
	Play / Slow		
	Pause / Step / Freeze		
	>> / Tune+		

