

 










 



 






 
 


 

 

 

 


 
 
 


 
 

 



 


 



 





 
 






| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  Tv Pre-CH |  Back |
|  Tv Power |  Shift + Power |  Dimmer |  0 |
|  Source |  AV |  I<< |  I<< |
|  Auto Power |  Sleep |  Stop |  Stop |
|  Speaker |  Pre Ch |  Play |  Play |
|  Tv Source |  Shift + AV |  Pause |  Pause |
|  Repeat |  Text |  >>I |  >>I |
|  Any net |  Media |  Sound Effect |  Menu |
|  Soundshare |  Dual |  Smart Volume |  Smart |
|  Tv Vol+ |  Shift + Vol + |  3D Sound Plus |  3D |
|  Tv Vol- |  Shift + Vol - |  DRC |  Subt |
|  Tv CH+ |  Ch + |  Right S/W Level |  Right |
|  Tv CH- |  Ch - |  Left S/W Level |  Left |
|  Audio Sync+ |  3 |  Vol+ |  Vol + |
|  Audio Sync- |  6 |  Vol- |  Vol - |
|  Tv Mute |  Shift + Mute |  Mute |  Mute |
|  Tv Info |  Info | | |

