





 



 















 



 

 

 











 





 
 
 
 


 
 



 



 






 


 

 

 






 

 
 




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		Source		AV / Input / RDS
	1		1		P -		CH- / Page-
	2		2		Info		Info / Angle
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Tools		Setup / OPT /
	6		6		Up		Up
	7		7		Return		Shift + Back / Return
	8		8		Left		Left
	9		9		Enter		OK
	FAV CH		Fav / Marker / PC		Right		Right
	0		0		Internet		Smart / List
	PRE CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	P +		CH+ / Page+		Green		Green / APP / Repeat





Original	Replacement
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 TTX/MIX Text / Goto
	 Media P Display / Media
	 Content D.Menu / Top
	 CH LIST Shift + Smart / List
	 AD Audio / Lang I/II
	 SUBT Subtitle / EQ
	 << / Tune-
	 Pause / Step / Freeze
	 >> / Tune+
	 Rec / Rec Mode
	 Play / Slow
	 Stop / Hold

Original	Replacement

