







































 



 





















 

 







| Original | Replacement | Original | Replacement |
|--|--|--|---|
|  Power |  Power |  0 |  0 |
|  Open / Close |  Eject / Surround |  Cancel |  Exit / Cancel / Clear |
|  Sleep |  Sleep / Timer |  I<< |  I<< / Preset- |
|  Dimmer / |  TV/Radio / |  Stop |  Stop / Hold |
|  DVD |  Shift + 2 |  Play / Pause |  Play / Slow |
|  Tuner |  Shift + 6 |  >>I |  >>I / Preset+ |
|  Aux |  Shift + 7 |  Dolby PL II Mode |  Smart / List |
|  1 |  1 |  Volume + |  Vol+ |
|  2 |  2 |  Tuning + / CH + |  CH+ / Page+ |
|  3 |  3 |  Dolby PL II Effect |  Display / Media |
|  4 |  4 |  Volume - |  Vol- |
|  5 |  5 |  Tuning - / CH - |  CH- / Page- |
|  6 |  6 |  Menu |  Menu / Home |
|  7 |  7 |  Info. |  Info / Angle |
|  8 |  8 |  Sub Title |  Subtitle / EQ |
|  9 |  9 |  Up |  Up |
|  Remain |  D.Menu / Top |  Audio |  Audio / Lang I/II |





| Original | Replacement |
|---|---|
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Back / Return |
|  |  Down |
|  |  Mute / Dimmer |
|  |  Pause / Step / Freeze |
|  |  Green / APP / Repeat |
|  |  Picture / Format |
|  |  Text / Goto |
|  |  Zoom / Size |
|  |  +  Shift + Sound / Title |
|  |  AV / Input / RDS |
|  |  Sound / Title |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  Red / Netflix / Search |

| Original | Replacement |
|---|---|
|  |  +  Shift + Subtitle / EQ |





| Original | Replacement | | |
|----------|-----------------|--|---------------|
| | Power | | Power |
| | Sleep | | Sleep / Timer |
| | Dimmer / | | TV/Radio / |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | Volume + | | Vol+ |
| | Tuning + / CH + | | CH+ / Page+ |
| | Volume - | | Vol- |
| | Tuning - / CH - | | CH- / Page- |

| Original | Replacement | | |
|----------|-------------|--|---------------|
| | Menu | | Menu / Home |
| | Info | | Info / Angle |
| | Up | | Up |
| | Left | | Left |
| | Enter | | OK |
| | Right | | Right |
| | Down | | Down |
| | Mute | | Mute / Dimmer |

