









Original	Replacement	Original	Replacement
POWER	Power	PL II MODE	Smart
OPEN/CLOSE	Eject	TUNING+ / CH+	Ch +
DIMMER	Shift + Mute	TUNING- / CH-	Ch -
DVD	Blue	VOLUME+	Vol +
TUNER/BAND	Green	VOLUME -	Vol -
AUX	Red	PL II EFFECT	Media
ASC	Shift + Ok	RETURN	Back
SLOW/MO/ST	List	MENU	Menu
SUBTITLE	Subt	INFO	Info
SUPER 5.1	Options	MUTE	Mute
MUSIC/ V-H/P	Dual	UP	Up
MOVIE	D. Menu	LEFT	Left
I<<	I<<	ENTER	Ok
STOP	Stop	RIGHT	Right
PAUSE	Pause	DOWN	Down
PLAY	Play	1/RDS DISPLAY	1
>>I	>>I	2	2





	Original		Replacement	
	3/TA		3	
	4/PTY -		4	
	5/PTY SEARCH		5	
	6/PTY +		6	
	7		7	
	8		8	
	9		9	
	0		0	
	SLEEP		Sleep	
	CANCEL		Exit	
	TEST TONE		3D	
	SOUND EDIT		Shift + Right	
	TUNER MEMORY		Shift + Down	
	ZOOM		Shift + Eject	
	LOGO		Shift + Up	
	EZ VIEW/NTSC/PAL		Format	
	REPEAT		Text	

	Original		Replacement	
	REMAIN		Shift + Left	

