









Original	Replacement	Original	Replacement
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Up	 Up
 1	 1	 Return	 Back / Return
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Internet	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Shift + Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE CH	 Fav / Marker / PC	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 P +	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-

Original	Replacement	Original	Replacement
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE		
 MENU	 OK	 RETURN	 INFO
 CLEAR	 EXIT	 BACK	
 CANCEL	 LIST	 SMART	 CH PAGE
 VOL+	 MEDIA	 DISPLAY	
 VOL-	 TV	 DVD	 CD - STB
 1	 VIDEO	 TAPE	 TUNER
 2	 AUX - HDD	 USB	 BLUETOOTH
 3	 7	 8	 9
 4	 HDMI - BAT	 PC	
 5	 GUIDE EPG	 FAV MARKER	
 6	 NETFLIX	 APP	 YouTube
7	SEARCH	REPEAT	REPEAT A-B
8	REPEAT	REPEAT A-B	RANDOM
9	SEARCH	REPEAT	RANDOM



