















 











Original	Replacement
	Power
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Text / Goto
	0
	Fav / Marker / PC
	Vol+
	Mute / Dimmer
	CH+ / Page+

Original	Replacement
	Vol-
	Smart / List
	CH- / Page-
	Shift + Red / Netflix /
	Menu / Home
	Shift + Blue / Prime
	TV/Radio /
	Up
	Guide / EPG / -/-
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat





Original		Replacement		Original	Replacement
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Settings		Setup / OPT /		
	Info		Info / Angle		
	AD/Subt.		Subtitle / EQ		
	Stop		Stop / Hold		
	<<		<< / Tune-		
	<<		<< / Preset-		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	>>		>> / Preset+		

