



Original	Replacement
	Power
	Mute / Dimmer
	Smart / List
	Shift + Sleep / Timer
	Shift + Power
	7
	Menu / Home
	Shift + Smart / List
	Sleep / Timer
	Audio / Lang I/II
	AV / Input / RDS
	Rec / Rec Mode
	Blue / Prime Video / Random
	Exit / Cancel / Clear
	I<< / Preset-
	Stop / Hold
	Play / Slow

Original	Replacement
	>>I / Preset+
	Guide / EPG / -/-
	CH+ / Page+
	Vol+
	Green / APP / Repeat
	CH- / Page-
	Vol-
	<< / Tune-
	Shift + Stop /
	D.Menu / Top
	>> / Tune+

