 

 
 



 



 



 

 







 








 
 

 






 
 
 

 





 
 


 

 


 





 
 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Tv Input	 AV	 Mute	 Mute
 Wide	 Format	 ←→	 Media
 ▼A-B	 Dual	 F/OK	 Ok
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 Red/Surround	 Red
 0	 0	 Green	 Green
 -/--	 Guide	 Yellow/Bass	 Yellow
 CS	 Smart	 Blue/Timer	 Blue
 P↔P	 Pre Ch	 [≡x]/O	 Subt





Original	Replacement	Original	Replacement
 [=+]	 3D		
 [=◆]	 Options		
 TXT/TV	 Text		
 [.] [Y] [=?]	 TV/R		

