



 

 
 



 



 
 
 
 


 



 
 
 
 
 



 
 


 







 


 
 



 
 
 
 

 
 
 

 
 
 
 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Tv/AV	 AV	 Sound	 Dual
 Mute	 Mute	 Picture	 Format
 Timer	 Shift + AV	 ▼ A-B	 Options
 [.] / [≡?]	 3D	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [≡♦]/Bass	 Subt
 0	 0	 TXT/TV	 Text
 -/ -/[≡0]	 GUIDE	 S.SYS	 Smart
 P=P/[≡+]	 PRE-CH	 Surround	 List





Original	Replacement	Original	Replacement
 Red	 A Red		
 Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		

