

 
 

 
 
 





 

 

 

 
 

 




Original	Replacement
 Power	 Power
 Wide	 Format
 Mute	 Mute
 Tv/Source	 TV/R
 ▼ A-B	 Dual
 →←	 Smart
 [.] [Y] [≡?]	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 -/=/[≡o]	 Guide
 CS	 Pre Ch
 Red/Surround	 Red
 Green	 Green
 Yellow/Bass	 Yellow
 Blue/Timer	 Blue
 Menu	 Menu
 P↔P	 Back
 Up	 Up
 P+	 Ch +
 P-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Left/Vol-	 Left
 F/OK	 Ok
 O/[≡x]	 Subt

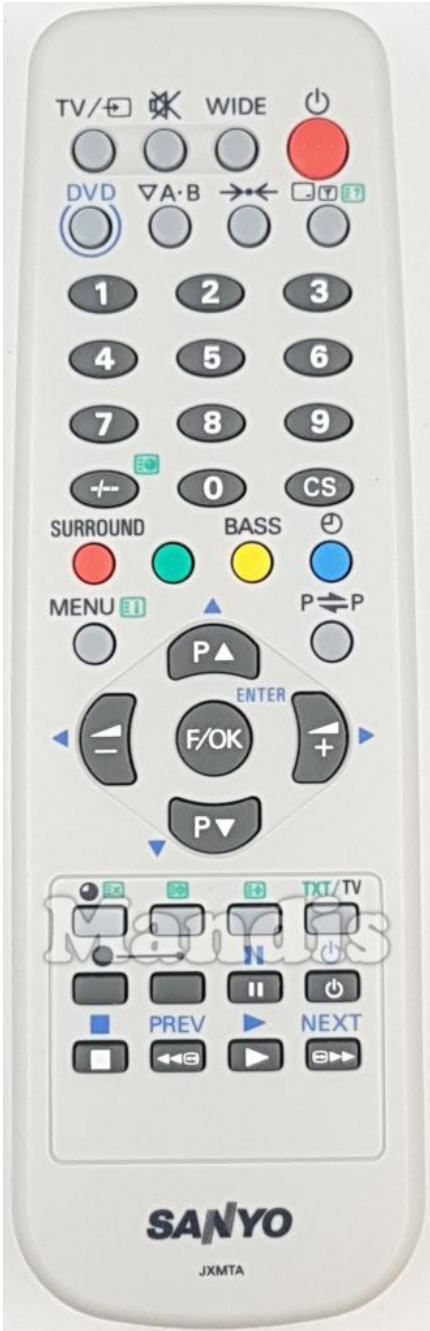 




Original	Replacement	Original	Replacement
[≡◆]	3D		
[≡+]	Options		
TXT/TV	Text		
Rec	Rec		
Pause	Pause		
Second Power	Shift + Power		
Stop	Stop		
<<	<<		
Play	Play		
>>	>>		

Original	Replacement	Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power				
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Pause		Pause				
	Next		>>				
	Play		Play				
	Prev		<<				
	Stop		Stop				

